

vtech[®]

User's Manual

Learning Tunes Karaoke™



© 2010 VTech
Printed in China
91-002489-002-000 

Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!


Sincerely,

Your friends at VTech®

To learn more about **Preschool Learning™** series and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Learning Tunes Karaoke™**! Turn on your microphone and sing along with the **Learning Tunes Karaoke™**! With 15 familiar songs, there is plenty of singing and learning fun to be had! The microphone can be turned on and off and has a voice changer effect with five different effects. The Karaoke character has an LCD screen and with a variety of facial expressions and fun animations that appeal to preschoolers.

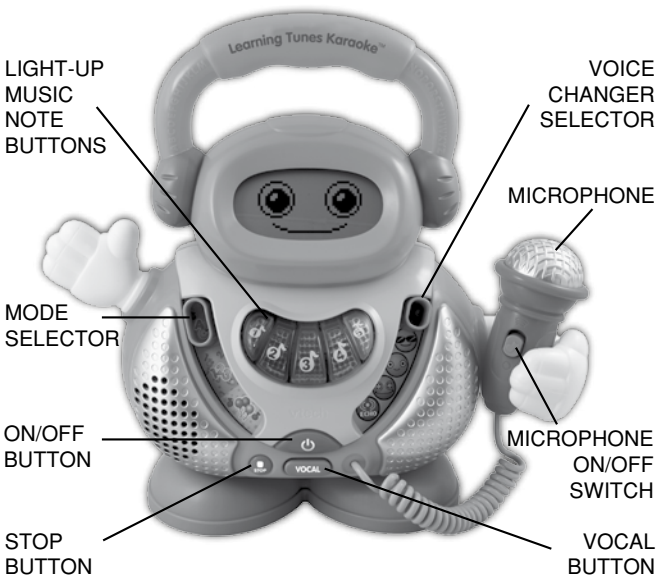


INCLUDED IN THIS PACKAGE

- One VTech® Learning Tunes Karaoke™
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packing lockers, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep instruction manual as it contains important information.

Unlock the packing lockers:

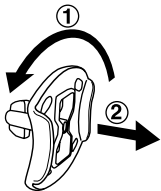

- ① Rotate the packing locker 90 degrees anti-clockwise.
- ② Pull out the packing locker.


Demo strip removal:

When the product is taken out of the packaging, please remove the demo strip next to the battery cover to activate normal play mode.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 3 new "AA" size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

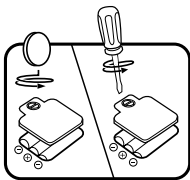

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.



Product Features

1. ON/OFF BUTTON

Press the ON/OFF BUTTON to turn the unit on. Press it again to turn the unit off.



2. MICROPHONE

Slide the MICROPHONE ON/OFF SWITCH to turn the MICROPHONE on and sing-along with the music.

The MICROPHONE only works when a song is playing. If you hear high frequency noise coming from the unit, move the MICROPHONE further away from the unit.



3. VOLUME CONTROL SWITCH

To adjust the volume, slide the VOLUME CONTROL SWITCH on the back of the unit. Three volumes to choose from, low (🔊), medium and high (🔊🔊).



ACTIVITIES

1. Slide the **mode selector** to choose letter songs, number songs or fun songs. There are five different songs in each of the three modes.



2. Press one of the **light-up music note buttons** to choose a song.



3. Slide the **voice changer selector** to choose one of the microphone effects. There are five different effects to choose from, normal voice, man voice, kid voice, robot voice and echo voice.



4. Press the **vocal button** to turn off the singing in the song that is playing. Press the button again to turn the singing back on.



5. Press the **stop button** while a song is playing to stop the song.



Sung Song Lyrics

Letter songs

1. Alphabet Song

A - B - C - D - E - F - G,
H - I - J - K - L - M - N - O - P,
Q - R - S, T - U - V,

W - X, Y and Z.

Now I know my A - B - C's,

Next time won't you sing with me?

2. BINGO

There was a farmer who had a dog,

And Bingo was his name - O!

B-I-N-G-O,

(Clap)-I-N-G-O,

(Clap)-(Clap)-N-G-O,

And Bingo was his name-O!

There was a farmer who had a dog,

And Bingo was his name - O!

(Clap)-(Clap)-(Clap)-G-O,

(Clap)-(Clap)-(Clap)-(Clap)-O,

(Clap)-(Clap)-(Clap)-(Clap)-(Clap),

And Bingo was his name-O!

3. Letter Fun (to the tune of "Ta-ra-ra Boom-de-ay")

A B C D E F,

G H I J K L,

M N O P and Q,

R S T U and V!

W X Y and Z,

It's fun now you can see,

To learn your ABC's,

And sing along with me!

4. Alphabet Soup (to the tune of "Pease Porridge Hot")

Alphabet soup, alphabet soup,

I love to eat alphabet soup.

Stir up my soup, what do I see?

A, B, C and D, E, F, G!
Alphabet soup, alphabet soup,
I love to eat alphabet soup.

5. Phonics Song

A says Aa and B says Buh,
C says Kuh, D says Duh,
E says Eh and F says Fff, G says Guh!
H says Huh and I says Ih,
J says Juh, K says Kuh,
L says Lll and M says Mmm, N says Nnn!
O says Oh and P says Puh,
Q says Kwuh, R says Rrr,
S says Sss and T says Tuh, U says Uh!
V says Vuh and W says Wuh,
X says Ks and Y says Yuh Z says Zzz!

Number Songs

1. This Old Man

This old man, he played one,
He played knick-knack on my thumb,
With a knick-knack paddywhack, give a dog a bone,
This old man came rolling home!
This old man, he played two,
He played knick-knack on my shoe,
With a knick-knack paddywhack, give a dog a bone,
This old man came rolling home!
This old man, he played three,
He played knick-knack on my knee,
With a knick-knack paddywhack, give a dog a bone,
This old man came rolling home!

2. One, Two, Buckle My Shoe

One, two, buckle my shoe.
Three, four, knock at the door.
Five, six, pick-up sticks.
Seven, eight, lay them straight.
Nine, ten, a big fat hen!
One, two, buckle my shoe.
Three, four, knock at the door.
Five, six, pick-up sticks.
Seven, eight, lay them straight.
Nine, ten, a big fat hen!

3. Ten Little Fireman

1 little, 2 little, 3 little fireman,
4 little, 5 little, 6 little fireman,
7 little, 8 little, 9 little fireman,
10 will save the day!
1 little, 2 little, 3 little fireman,
4 little, 5 little, 6 little fireman,
7 little, 8 little, 9 little fireman,
10 will save the day!

4. Sing A Song of Sixpence

Sing a song of sixpence,
A pocket full of rye.
Four and twenty black birds baked in a pie.
When the pie was opened, the birds began to sing.
Wasn't that a dainty dish to set before the king!
Sing a song of sixpence,
A pocket full of rye.

Four and twenty black birds baked in a pie.
When the pie was opened, the birds began to sing.
Wasn't that a dainty dish to set before the king!

5. Hickory, Dickory, Dock

Hickory, dickory, dock!
The mouse ran up the clock.
The clock struck one,
The mouse ran down,
Hickory, dickory, dock!
Hickory, dickory, dock!
The mouse ran up the clock.
The clock struck two,
The mouse ran down,
Hickory, dickory, dock!
The clock struck two,
The mouse ran down,
Hickory, dickory, dock!

Fun Songs

1. Humpty Dumpty

Humpty Dumpty sat on a wall,
Humpty Dumpty had a great fall.
All the king's horses and all the King's men,
Couldn't put Humpty together again.
Humpty Dumpty sat on a wall,
Humpty Dumpty had a great fall.
All the king's horses and all the King's men,
Couldn't put Humpty together again.

2. Oh Where, Oh Where has My Little Dog Gone?

Oh where, oh where has my little dog gone?
Oh where, oh where can he be?
With his ears cut short and his tail cut long,
Oh where, oh where can he be?
Oh where, oh where has my little dog gone?
Oh where, oh where can he be?
With his ears cut short and his tail cut long,
Oh where, oh where can he be?

3. Pop! Goes the Weasel

All around the mulberry bush,
The monkey chased the weasel.
The monkey thought 'twas all in fun.
Pop! Goes the weasel!
A penny for a spool of thread,
A penny for a needle.
That's the way the money goes,
Pop! Goes the weasel.

4. A-Ticket, A-Tasket

A-ticket, A-tasket,
A green and yellow basket.
I wrote a letter to my love,
On the way I dropped it.
I dropped it, I dropped it,
Yes, on the way I dropped it.
A little boy picked it up,
And put it in his pocket.

5. Jack and Jill

Jack and Jill went up the hill,
To fetch a pail of water.

Jack fell down and broke his crown,
And Jill came tumbling after.

Jack and Jill went up the hill,
To fetch a pail of water.

Jack fell down and broke his crown,
And Jill came tumbling after.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE

Creating and developing **Preschool Learning™** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.