

OTHER TEDDY RUXPIN® ADVENTURES

The Mushroom Forest
You Can Be Anything You
Want To Be.

Lost in Boggley Woods
Teddy and His Friends
Meet the Woggles.

**The Do-Along
Songbook**
Sing Along with Teddy
Ruxpin and His Friends.

Gizmos and Gadgets
Teddy and His Friends
Make an Important
Discovery.

Grundo Beach Party
Sun and Sand with Friends
Can Be Fun.

"Quiet Please"
Teddy Sings His Way
Through a Quiet Day.

**Teddy Ruxpin
Lullabies**
Warm and Cuddly Songs to
Dream By.

**Safe at Home with
Teddy Ruxpin**
Grubby's Special
Assignment.

**Teddy Ruxpin
Lullabies II**
More Dreamy Songs for
Sleepy Time.

**Wooly and the
Giant Snowzos**
Do You Believe Everything
You Hear?

**Fire Safety With
Teddy Ruxpin**
Teddy's Junior Fire Patrol.

**Water Safety With
Teddy Ruxpin**
The Fobs Learn
How to Swim.

PLAYSKOOL

© 1991 Playskool, Inc., Pawtucket, RI 02862 U.S.A., a subsidiary of Hasbro, Inc. All Rights Reserved.
© 1991 Alchemy II, Inc. All Rights Reserved.
TEDDY RUXPIN and THE WORLD OF TEDDY RUXPIN are trademarks of Alchemy II, Inc., Chatsworth, CA.
2810 P/N 43185500

THE WORLD OF

TEDDY RUXPIN®

Care And Instructions

IMPORTANT

- Teddy Ruxpin will turn himself off automatically at the end of the tape.
- Teddy Ruxpin uses only specially designed cassettes. Standard size cassettes will not fit and should NEVER be used in Teddy Ruxpin.
- The moving parts that make talking toys "come to life" are controlled by motors. Audible motor sounds are normal during toy operation.
- Teddy Ruxpin uses 4 "AA" size batteries. ALKALINE batteries are recommended. Non-alkaline batteries won't last as long.
- Teddy Ruxpin Adventure cassettes are specially

designed to go in ONLY one way. Never try to force a tape in the wrong way.

- If Teddy Ruxpin slows down or is out of

synchronization, change the batteries. Alkaline batteries should last several hours.

■ Teddy Ruxpin Adventure cassettes are continuous loop, so there's never any need to turn the tape over. To hear it again, simply touch the button on his back and he'll tell you the story again.

■ If you have any questions or problems concerning the operation, care or repair of Teddy Ruxpin, please do not hesitate to call toll-free 1-800-PLAYSKL.

CAUTION: Teddy Ruxpin is recommended for children ages 3 and up. Tape in cassette can be unwound by small children causing possible entanglement hazard. Adult supervision is recommended for cassette use. Contains small parts which may present a choking hazard in younger children.



Questions? Call:™
1-800-PLAYSKL

HOW TO OPERATE

Teddy Ruxpin is now your Very Special Friend. To operate him, there are just a few simple steps you need to take.

1. Put in the Batteries!

Open his tunic and look at his back. In the middle, there's a door. Open it by gently pushing in and lifting the small tab at the bottom. Insert four "AA" size alkaline batteries as indicated by the markings on the inside. (Non-alkaline batteries won't last as long.) Close the door gently but firmly.

2. Put in the Special Animation Cassette! Simply grasp the edge of the cassette, label side up with the tape openings away from you and going into Teddy Ruxpin. Gently slip the cassette through the cassette opening located just under the battery door. It will only go in one way, so never force the cassette in. But do make sure it locks into place (you'll hear the click).

3. Fasten Teddy Ruxpin's tunic at the side(s).

4. To start the cassette, simply press the button at the top of his back. (You can do this right through his tunic.) He's now ready to tell you the most wonderful stories. If you want to hear and see Teddy Ruxpin tell the same story again, simply press the button. There's no need to turn the tape over.

5. To change cassettes, gently pull the cassette out (even if he's still talking) and slip in a new cassette.

6. Teddy Ruxpin will turn himself off automatically at the end of each cassette. However, you can also turn him off by pressing the button at the top of his back.

HOW TO TAKE GOOD CARE OF TEDDY RUXPIN

Teddy Ruxpin has been made to withstand years of cuddling and love, but there are a few things to keep in mind.

■ Give Teddy Ruxpin a pleasant environment. Excessive heat or submersion in water can cause damage.

■ Keep Teddy clean. Remove dirt with a soft cloth dampened with a mild soap, rinse and dry with a soft cloth.

■ Do not poke at Teddy with sharp objects, like pencils or scissors. Please, only fingers.

■ Since all the sound and animation programming that makes Teddy Ruxpin come alive is on the special animation cassette, please keep the cassette(s) and cassette player as clean as possible. Keep the cassettes in a dry, cool place and away from sources of magnetic fields, such as televisions, microwave ovens and speakers.

■ If you're not going to play with Teddy Ruxpin for more than two weeks, it's a good idea to take out the batteries.

DO'S AND DON'TS

DO keep fresh alkaline batteries in Teddy Ruxpin.

DO keep cassette(s) and cassette player clean.

DON'T take him in the bathtub.

DON'T drop Teddy Ruxpin.

DON'T put anything in Teddy's mouth or eyes.

DO give Teddy Ruxpin lots of love and please DO have a wonderful time.

IS THERE A PROBLEM?

■ Teddy Ruxpin Adventure Series cassettes can only go in one way. However, the cassette should never be forced in.

■ If Teddy Ruxpin looks like his animated actions are slowing down or if he sounds like he's sick, change the batteries. The four "AA" alkaline size batteries should last for several hours before you have to change them.

■ If his mouth or eyes don't move, check to see if there's something stuck in or near them.

■ If Teddy Ruxpin doesn't work at all, check to see that the batteries are in correctly and that a cassette is in. (Teddy will not work without a cassette.)

■ If none of the above suggestions help, please call toll-free 1-800-PLAYSKL.

WORLDS OF WONDER

Worlds of Wonder, Inc. manufactures a high quality and innovative family of products which combines the latest animation technology with good, wholesome fun and adventure. We are committed to both excellence and the imaginative spirit of children everywhere.



THE WORLD OF

Ages 3 & Up

TEDDY RUXPIN[®]

PLEASE NOTE:

**For best results, remove cassette tape
from Teddy Ruxpin when not in use.**

© 1992 Alchemy II, Inc. TEDDY RUXPIN and THE WORLD OF TEDDY RUXPIN
are trademarks of Alchemy II, Inc., Chatsworth, CA.
2810 P/N 43220000