

COCLOCK


居眠りが大好きで 時間になると 経営出す。

コックロック // 目覚まし時計

取り扱い説明書

この度は、TOMY「コックロック」をお買い上げいただきまして、誠にありがとうございます。ご使用の前に、この取り扱い説明書をよくお読みください。

TOMY

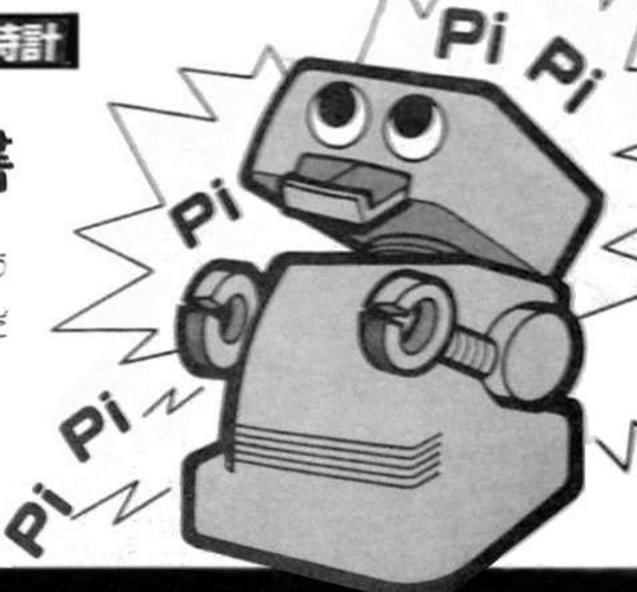



時刻の合わせ方


針型しいてこを押しながら矢田の 方向に回して、正しい勝刻に合わ せてください。

HOW TO SET THE TIME

Push in and turn the Time-Set Knob in the direction indicated, to set the correct time.

アラームの使用方法


(解除)

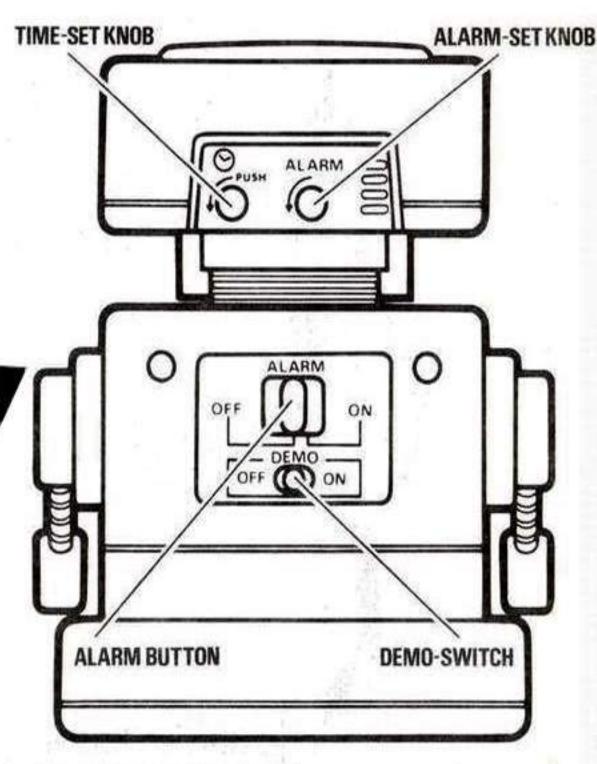

HOW TO USE THE ALARM

Turn the ALARM SET KNOB in the direction indicated until the alarm hand points to the desired time. Then switch the ALARM BUTTON to the ON position and your alarm is set to go off.

To stop the alarm ringing or to cancel a set alarm time, switch the ALARM BUTTON all the way across to the OFF position on the left. (Release the button and it will automatically return to its neutral position in the middle.)

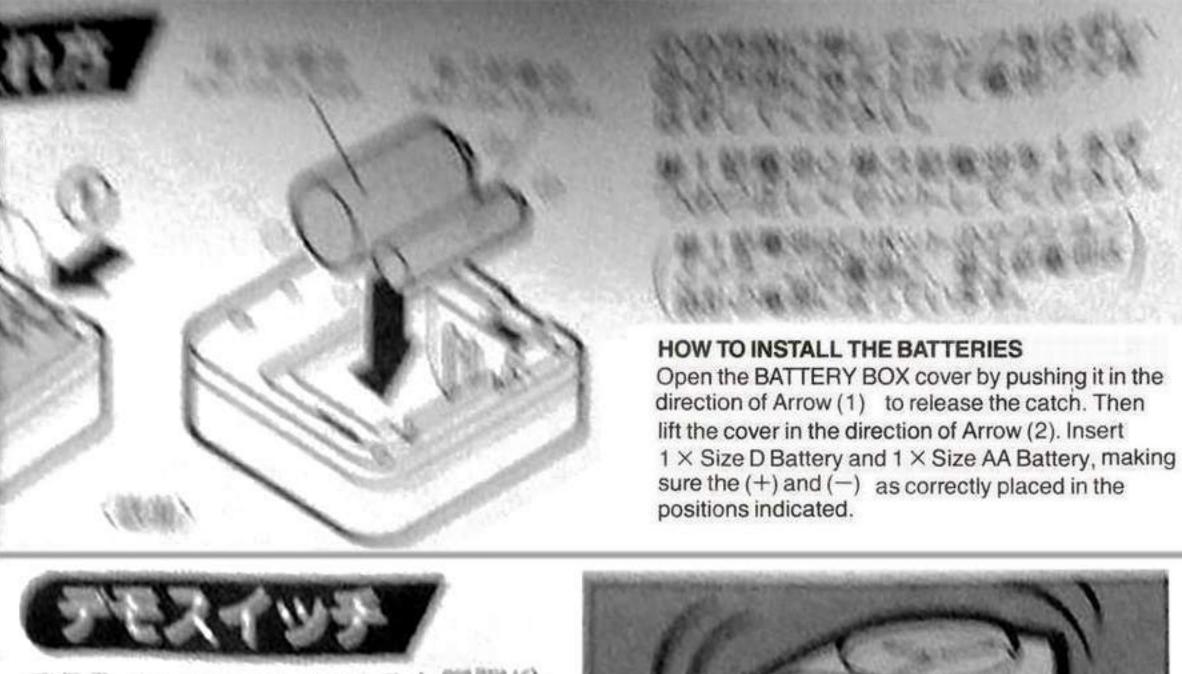




DEMO-SWITCH


Turn the Demo Switch to ON and the CoClock will nod his head into a doze.

If you want to save it, turn the switch OFF.

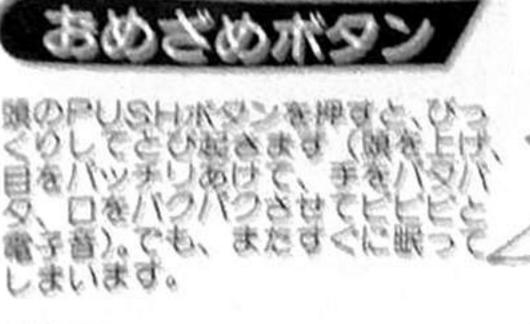



PUSH BAR

Press the PUSH Bar on top of the CoClock's head and awaken him from his sleep with a start

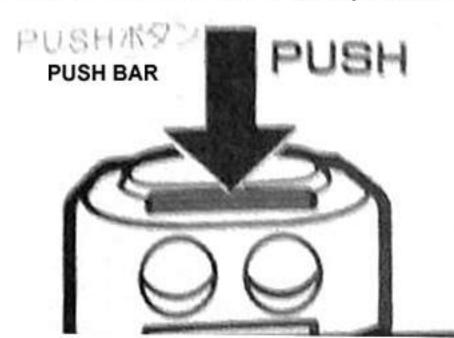



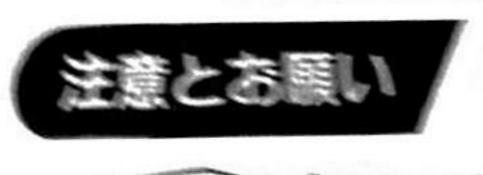

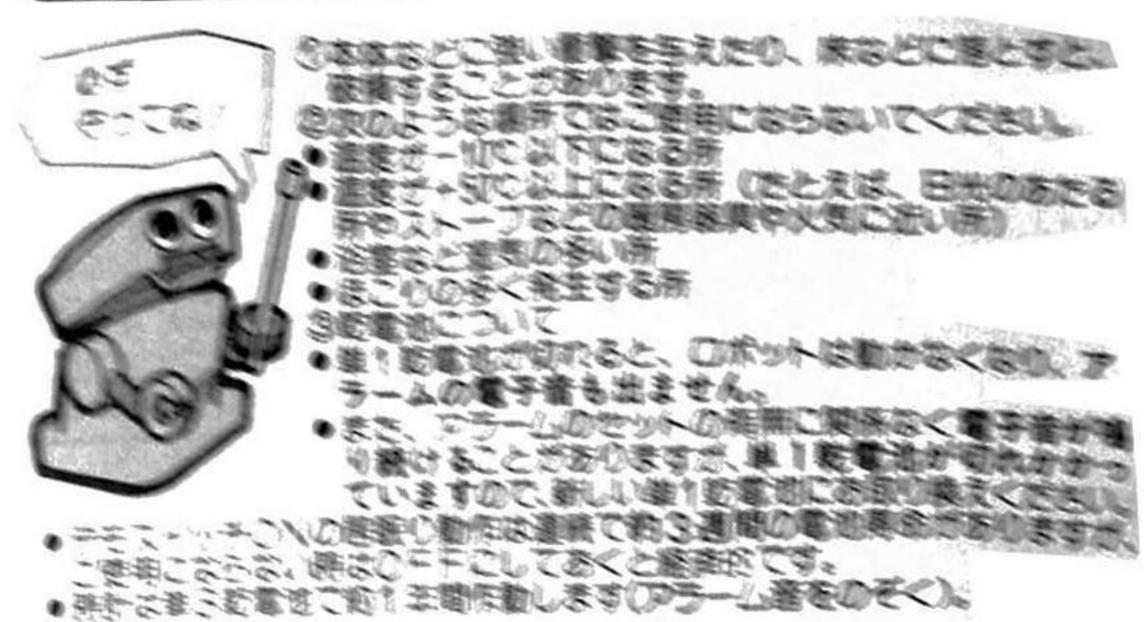

CAUTION

- 1. Any heavy impact, such as dropping Mr. Time on a hard surface, may cause damage or breakage.
- 2. Mr Time should not be used:
- ★ In places where the temperature reaches below -10°C
- ★ In places where the temperature rises above 50°C (e.g. in direct, strong sunlight, near ovens, heaters or fires)
- * In high humidity area such as bathrooms
- In area with high dust content
- 3. Batteries
- ★ Mr. Time will stop moving and the alarm will not sound when the Size D battery runs out.
- ★ Should the alarm continue to beep regardless of alarm setting, it is an indication that the Size D Battery is nearing the end of its cell life. Replace it with new battery.
- ★ The Size D Battery also powers Mr. Time's nodding action, and will last for approximately 3 weeks if nodding is continuous. Otherwise it will last for approximately 1 year.
- * The clock will run on 1 Size AA Battery for approximately 1 year.

製品につきましては、万全の注意をはらって製造に当たっておのますが、万一 一お気付きの点がございましたら、下記へご連絡ください。 宛先:〒124 東京都葛飾区立石7-9-10 株式会社トミーお客様サービス係コックロック担当 TEL.03(3693)1031(大代表)