

**No. 2209**

# **REMOTE CONTROL PLAYBOT 700**




- \* **Eyes Light Up**
- \* **Manually Movable Arms and Head**
- \* **Forward, Backward, Turns in Reverse**
- \* **Key-Lock Function on Controller**
- \* **Hands Hold Object**
- \* **Requires 2 "AA" size Alkaline Batteries (not included)**

## BATTERY INSTALLATION

Playbot 700 is powered by 2 standard "AA" batteries (not included), which fits into the remote control unit. To insert:

- Open the battery cover by sliding in the direction of the arrow
- Insert battery, observing correct polarity
- Close the cover by sliding back into the original position

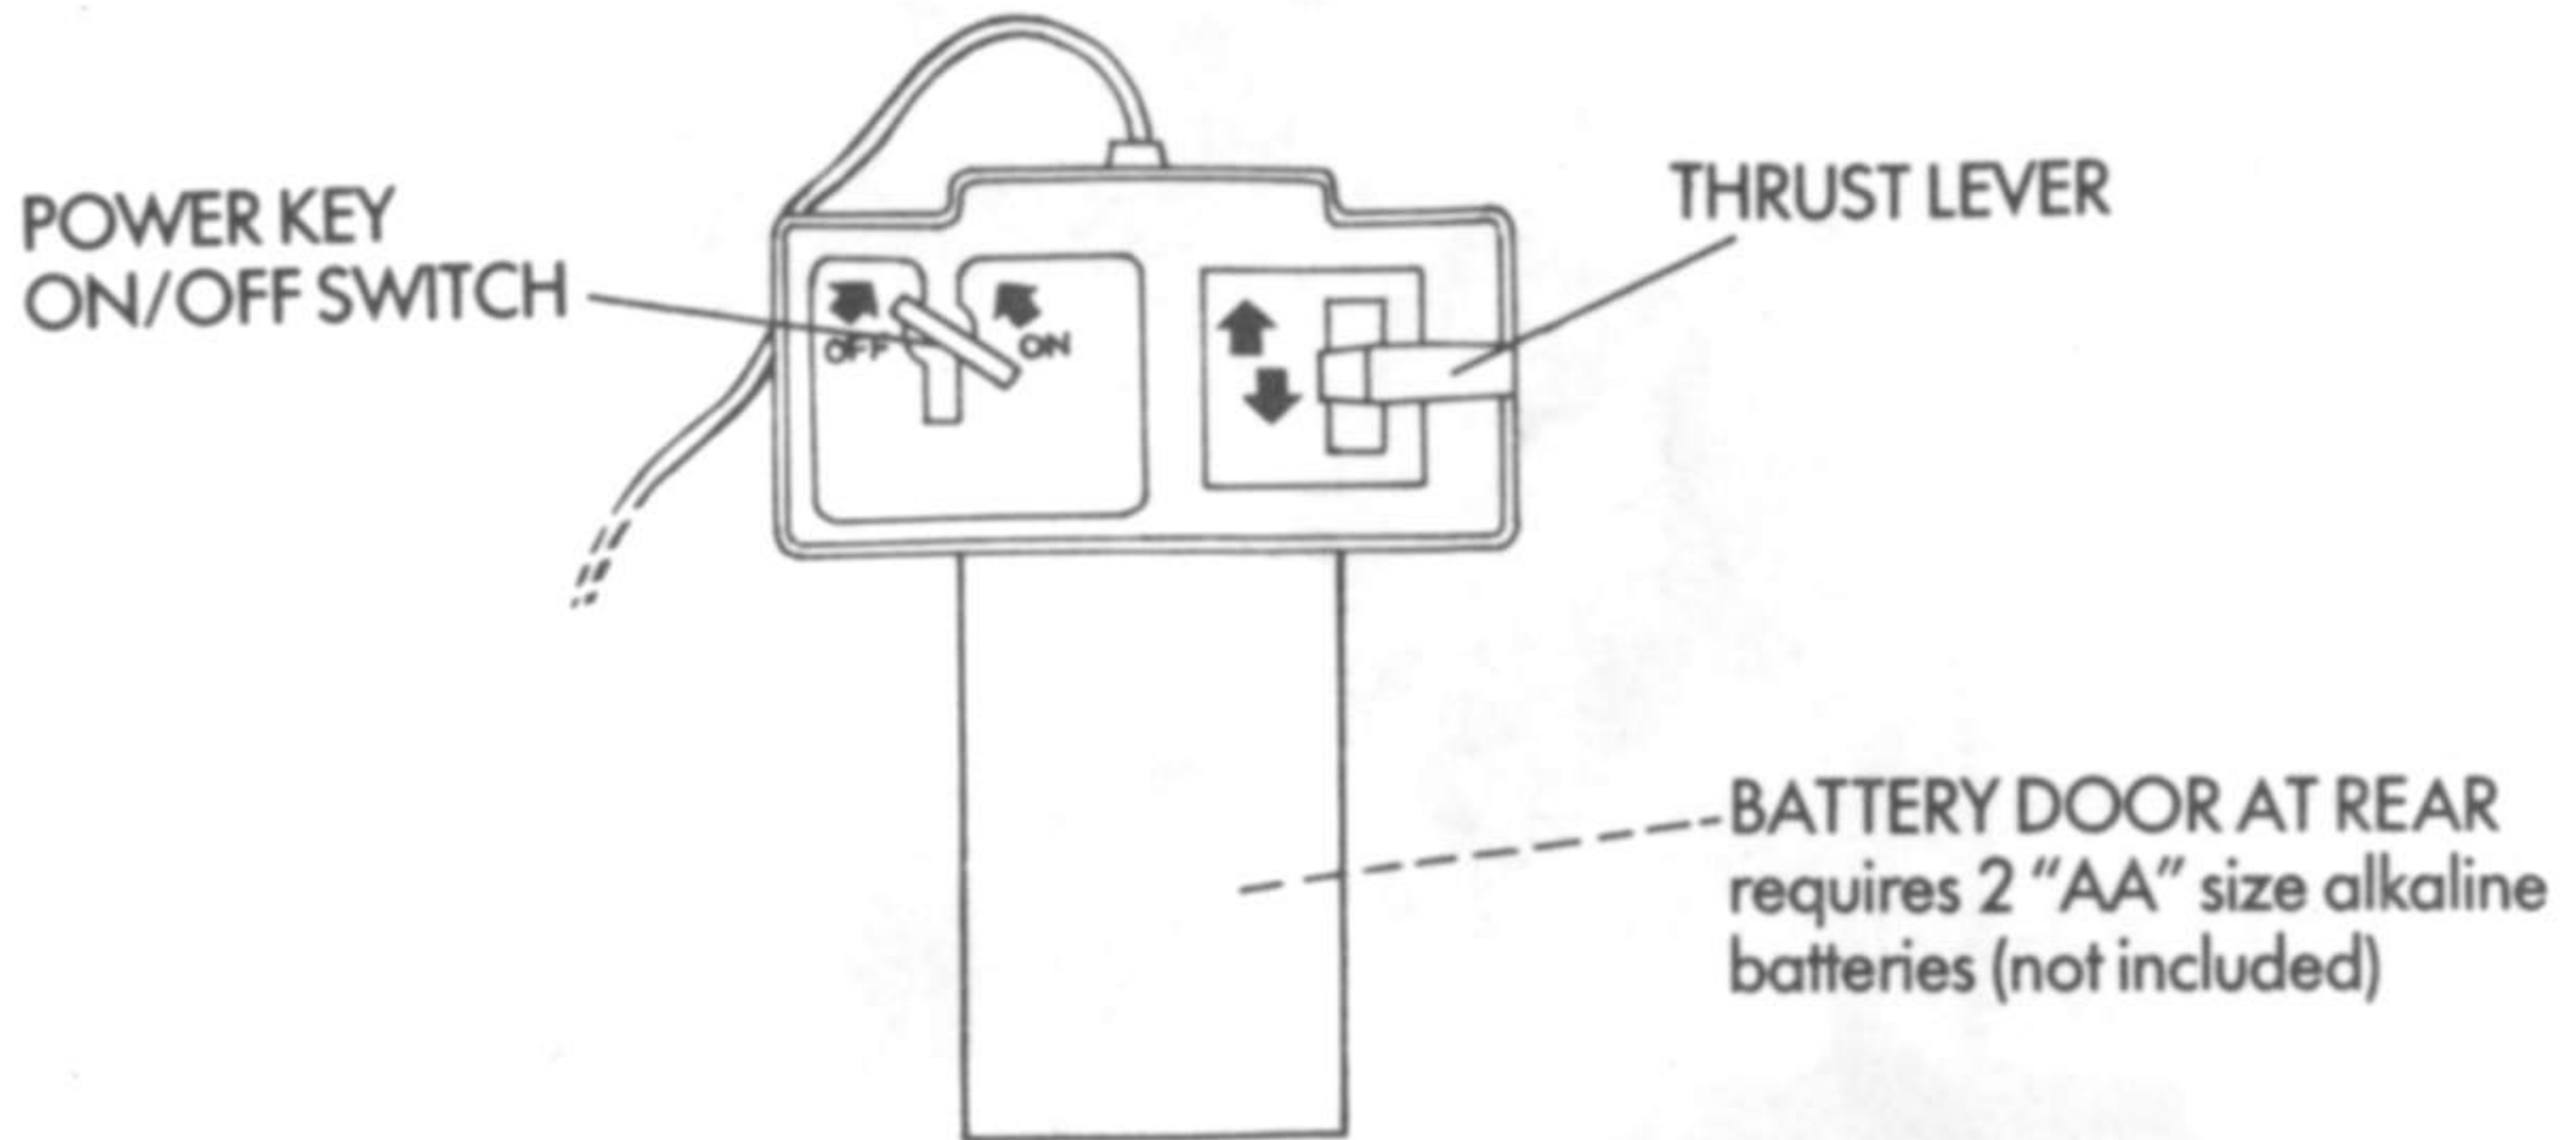

## BATTERY LIFE

For longer battery life, and better function, we recommend that you use alkaline batteries.

## OPERATION

Playbot is operated by using the remote control unit provided.

- To turn the robot on first turn the key on the remote control unit anticlockwise until the green colour is showing
- Forward/Reverse Action: To make Playbot go forward, push the thrust lever on the remote control unit forward. For reverse just pull the lever back.
- Playbot's eyes light up whenever you operate the thrust lever.
- Playbot works best on a smooth surface.

## CARE AND MAINTENANCE

- When not using Playbot be sure to turn the power off by turning the key on the remote control unit clockwise until there is no green showing.
- Do not leave old batteries inside Playbot. They may leak and cause damage. If you intend not to use Playbot for some time it is best to remove the batteries.
- Never use strong cleaning agents, as they may damage the finish.
- Do not let Playbot get wet.
- Do not store in excessively hot, or cold, places.




MANUALLY  
MOVABLE HEAD

EYES  
LIGHT UP

MANUALLY  
MOVABLE ARMS

HANDS  
HOLD OBJECT

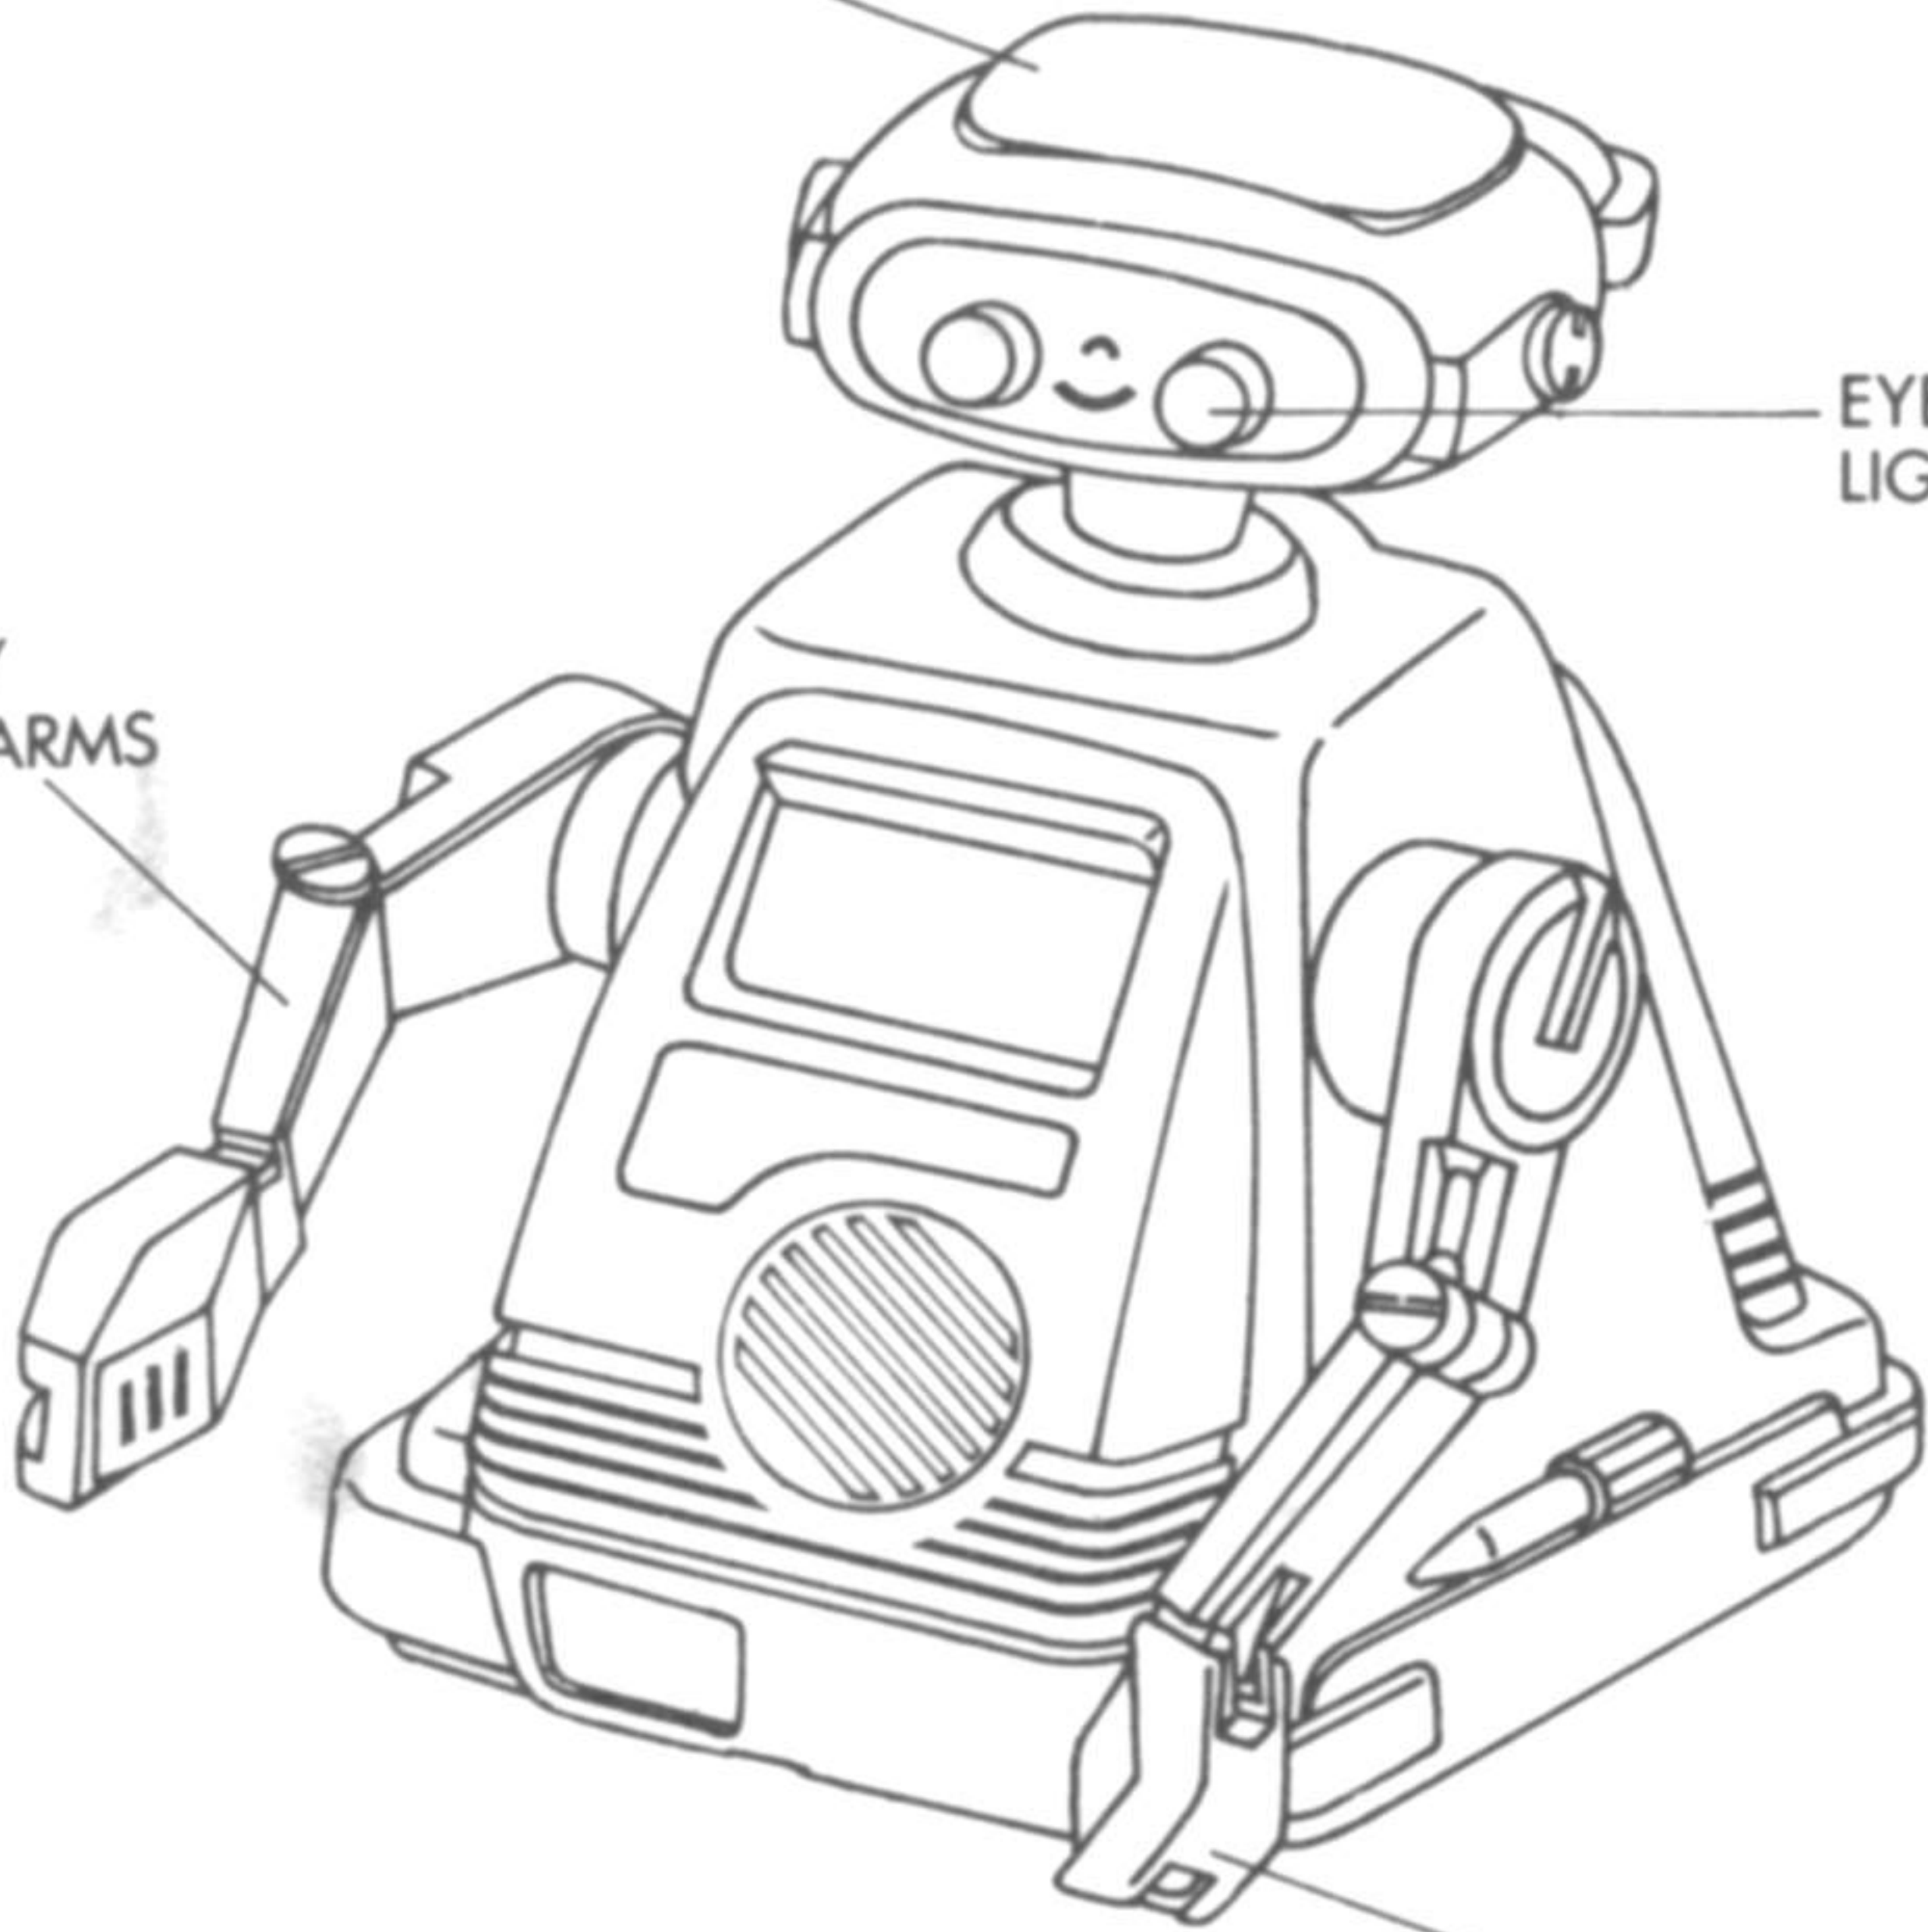

ALL RIGHTS RESERVED

© 1988 Playtime Products Inc., New York, NY 10010 USA

MADE IN CHINA