



For details on our full model kit lineup, articles, announcements and more, check us out on the web at

**round2models.com**



Look for these and other great kits from **POLAR LIGHTS**

round2models.com


Forbidden Planet  
**C-57D Space Cruiser**  
POL812



**Witch**  
POL811



**Dinosaurs Pteranodon**  
POL813

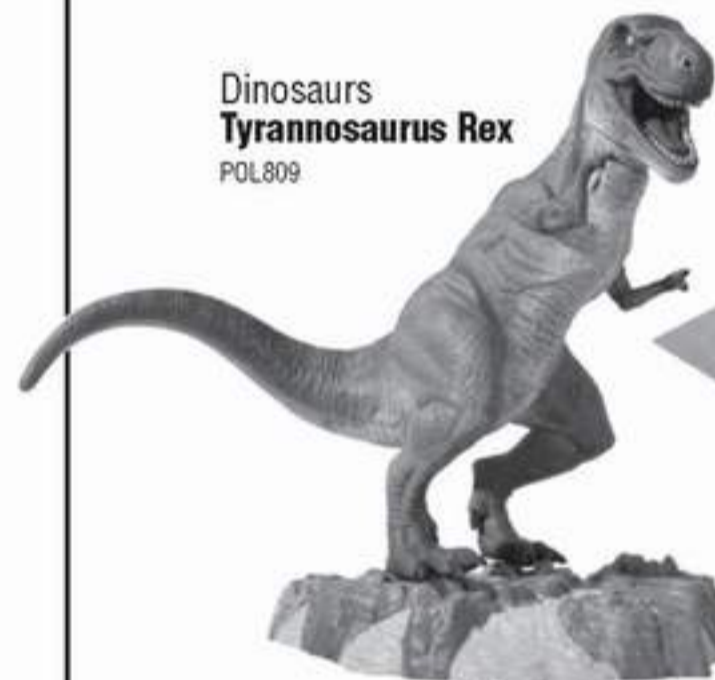

**Dinosaurs Tyrannosaurus Rex**  
POL809




**Star Trek U.S.S. Enterprise NCC-1701-E**  
AMT613



**Star Trek U.S.S. Enterprise NCC-1701-A**  
POL808

TM, ® © 2009 CBS Studios Inc. All rights reserved.  
STAR TREK and related marks are trademarks of CBS Studios Inc.  
© 2009 Paramount Pictures Corp. All rights reserved.

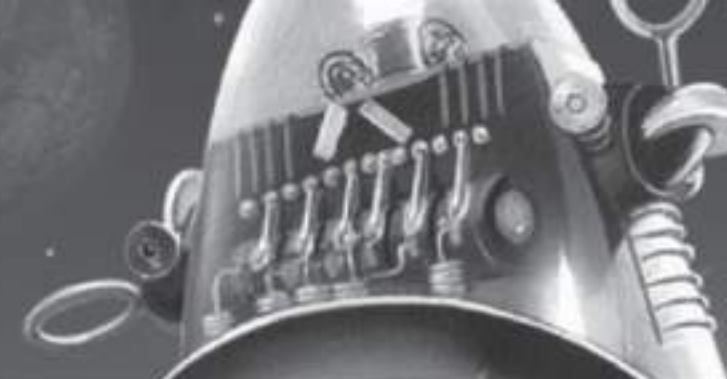

**FORBIDDEN PLANET**  
**ROBBY**  
**THE ROBOT**

**IMPORTANT – READ THIS FIRST!**

ASSEMBLY INSTRUCTIONS **POLAR LIGHTS**

- Before assembling model, study sketch carefully.
- Take time to familiarize yourself with all the parts and their corresponding part numbers.
- Carefully cut the parts from the plastic tree supports and remove any burrs.
- Apply cement to inside surfaces only. Avoid getting cement on outer surfaces of model sections.
- Use cement very sparingly and avoid getting cement on hands, so as not to mar or smear plastic surfaces.
- Do not hurry. Work carefully and patiently.
- Before proceeding to cement parts together, it is advisable to fit parts together dry (without cement) so that you may familiarize yourself with the parts and how they go together, also noting the points where cement is to be applied.
- For best results, assemble model exactly in the order indicated.
- This kit is molded of styrene plastic – use only styrene-compatible glues or cements. Assure yourself of a perfect model every time!
- For best results, use only high quality paints designed specifically for plastic model kits.

**PAINTING GUIDE**

The recommended paint for airbrush application is Badger's Freak Flex; another good choice is Testor's Model Master. Liquid mask or tape will be helpful in painting detailed areas. Use small brushes for fine details.

**ROBBY**

- Body, Arms & Legs . . . . . Gunmetal Gray
- Weapons Neutralizers . . . . . Blue tips
- Area behind Voice Tubes on Voice Tubes Support Panel . . . . . Blue; Gray on sides
- Buttons on Faceplate . . . . . Red and Yellow alternating
- Faceplate . . . . . Silver
- Optional Claws . . . . . Silver claws with Black base and Red bands
- Optional Robotoid Chest Plate . . . . . Gray/Red and Yellow panels

**BASE**

Sand/Tan colored speckled with medium brown wash

<b>SKILL</b> 2 LEVEL	<b>AGE</b> 10+	<b>CEMENT</b> REQUIRED	<b>PAINT</b> REQUIRED	Contents include: All plastic pieces to complete model, decal sheets and pictorial instructions describing assembly. Paint and glue not included. Model shown was assembled and finished by a professional modeler.
----------------------------	-------------------	---------------------------	--------------------------	---




POLARLIGHTS is a registered trademark of Learning Curve Boards, Inc. used under license to Round 2, LLC. © 2009 Learning Curve Boards, Inc. All rights reserved.  
FORBIDDEN PLANET and all related characters and elements are trademarks of and © Turner Entertainment Co. WB SHIELD, TM & © Warner Bros. Entertainment Inc. (S9)

Round 2 and designs are trademarks of Round 2, LLC. © 2009 Round 2, LLC, South Bend, IN 46628 USA. Product and packaging designed in the USA. Made in China. All rights reserved.

Professionally built model assembled, finished and photographed by E. James Small www.smallartworks.com  
Packaging illustration by Chris White www.chriswhiteart.com



**round2models.com**

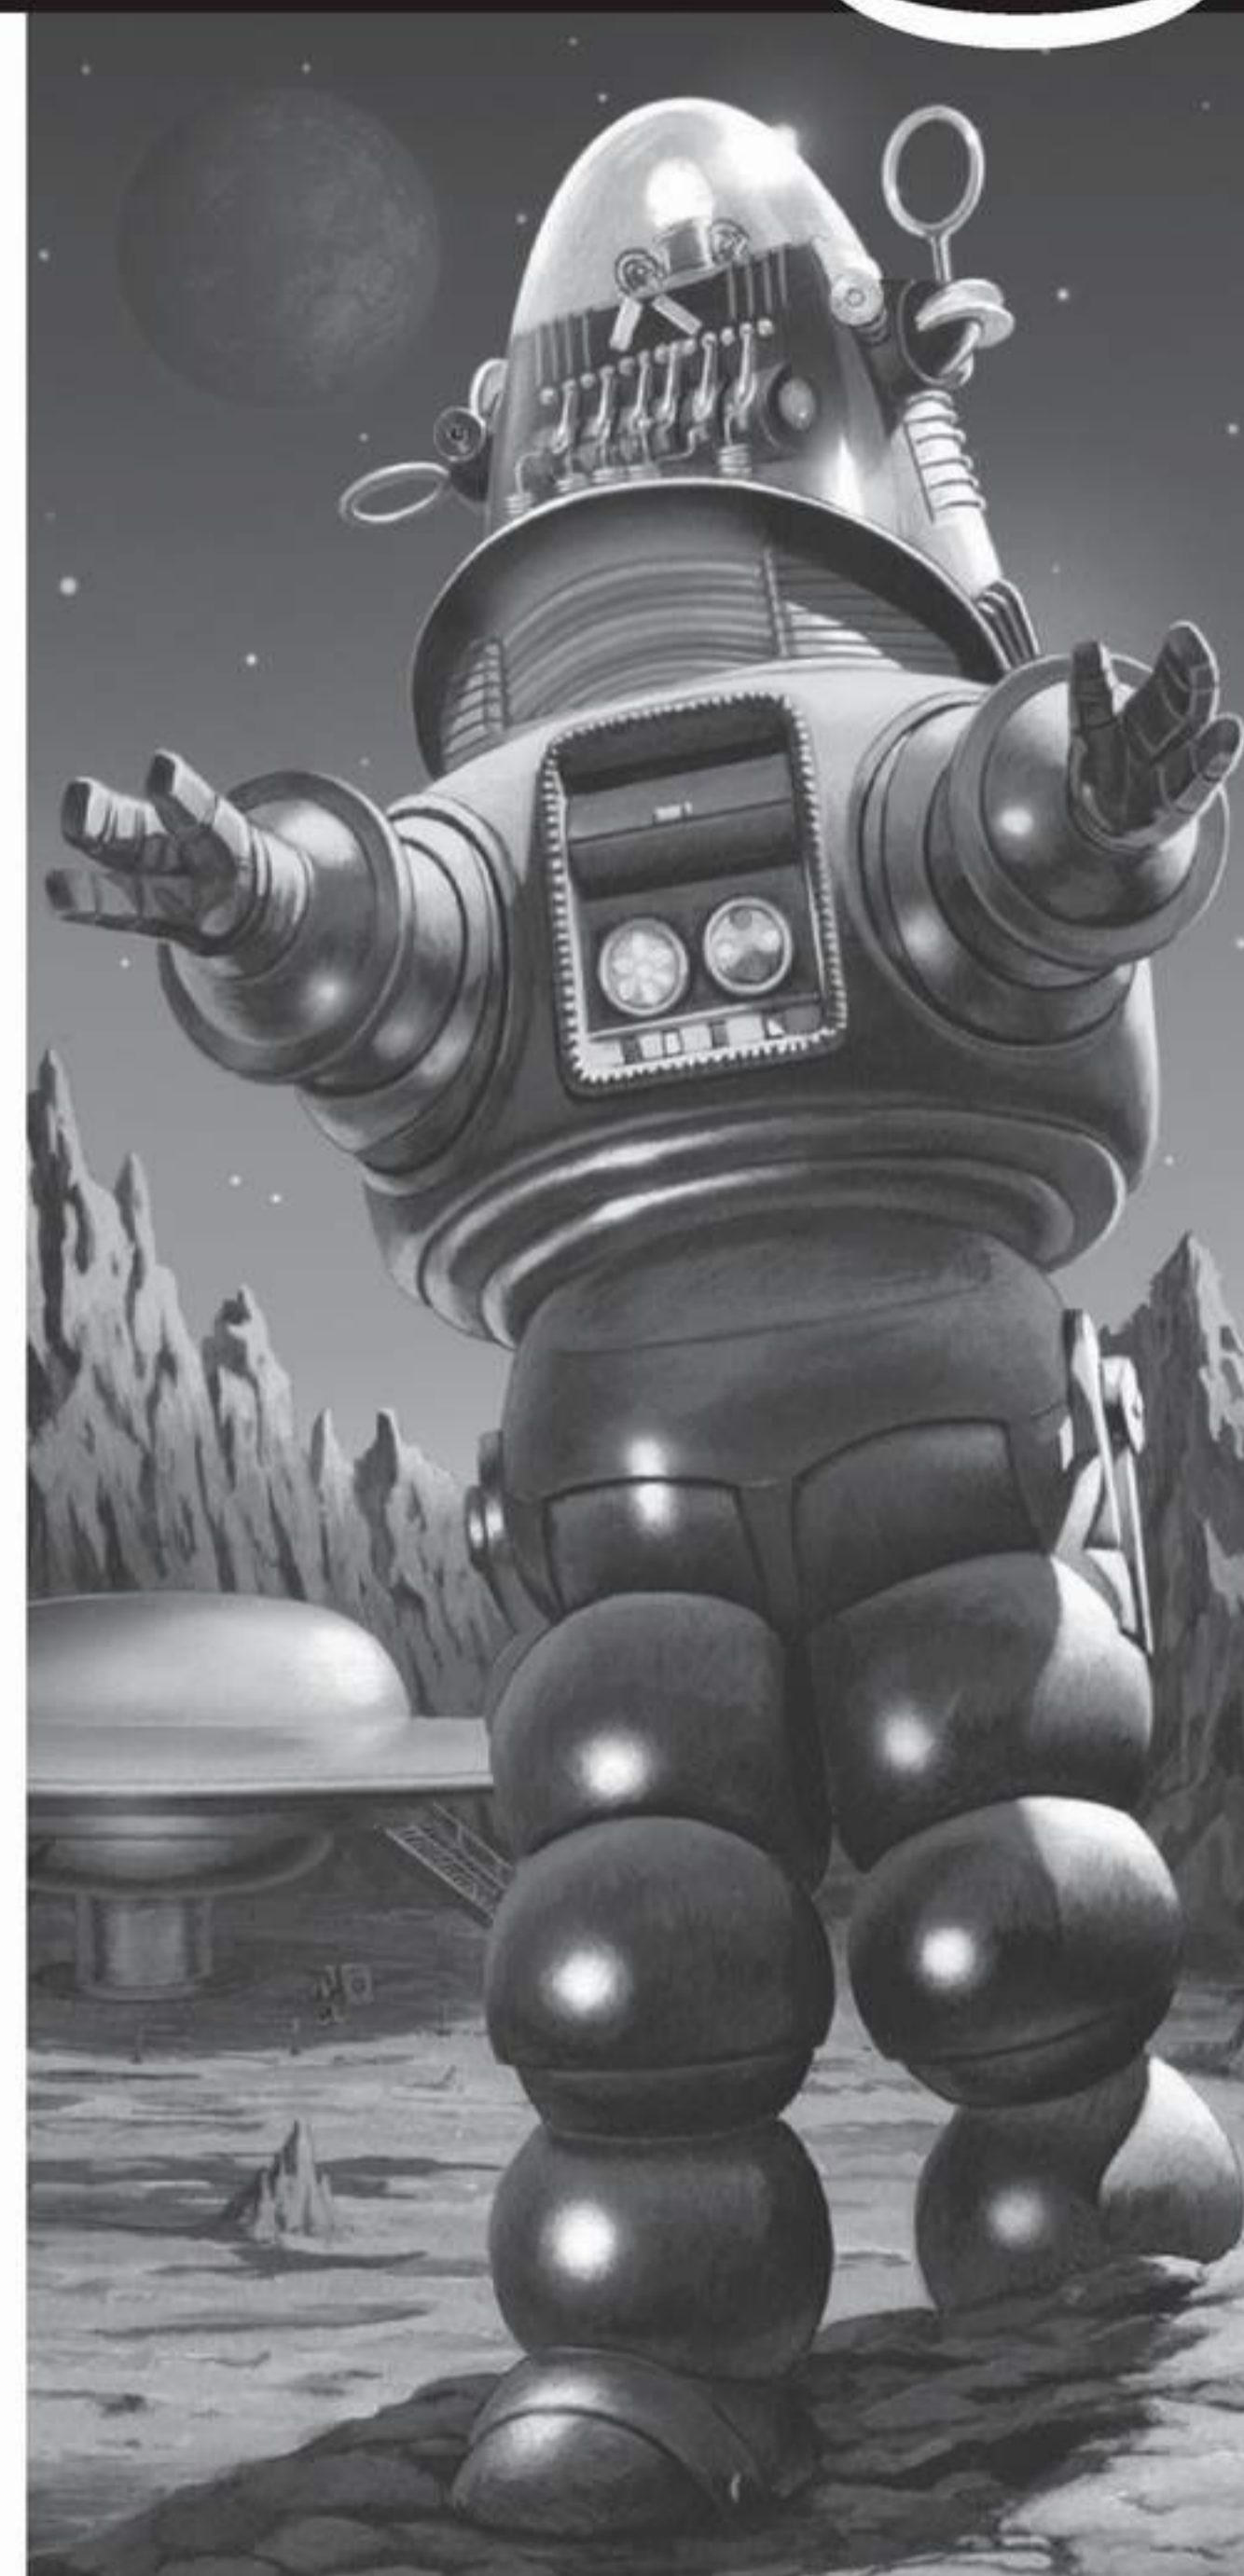

Model Kit **POL810**


## 1 START - ASSEMBLE ROBBY'S HEAD

Start with the **main gyro stabilizer (#1)**, cement it to **gyro stabilizer base (#2)**. Cement all three **gyro stabilizers (#3)** to **gyro stabilizer base (#2)**. Cement this assembly to **head main housing (#12)**. Set aside to dry.

Cement **ion modulators (#14)** to **head faceplate (#13)**. Now cement **head faceplate (#13)** assembly to **head main housing (#12)** assembly. Cement **main voice simulator tube (#16)** to the front of the assembled head, then cement all four **voice simulator tubes (#15)** in place.

Cement **transducer halves (#6)** and **(#7)** together. Then cement two **weapons neutralizers (#5)** into the small holes of this assembly, and a **ring scanner (#4)** into the larger hole on the side. For the opposite side, cement **transducer halves (#8)** and **(#9)** together. Then cement the remaining two **weapons neutralizers (#5)** into the small holes of this assembly, and a **ring scanner (#4)** into the larger hole on the top. Now cement these assemblies into place on either side of the head assembly, (see illustration) and cement the **transducer fins (#10)** and **(#11)** under the transducers, on each side of the head assembly.


Carefully cement **plastic dome (#19)** into place over the head assembly. **DO NOT** use too much glue or smear it on the clear plastic. Set aside to dry.

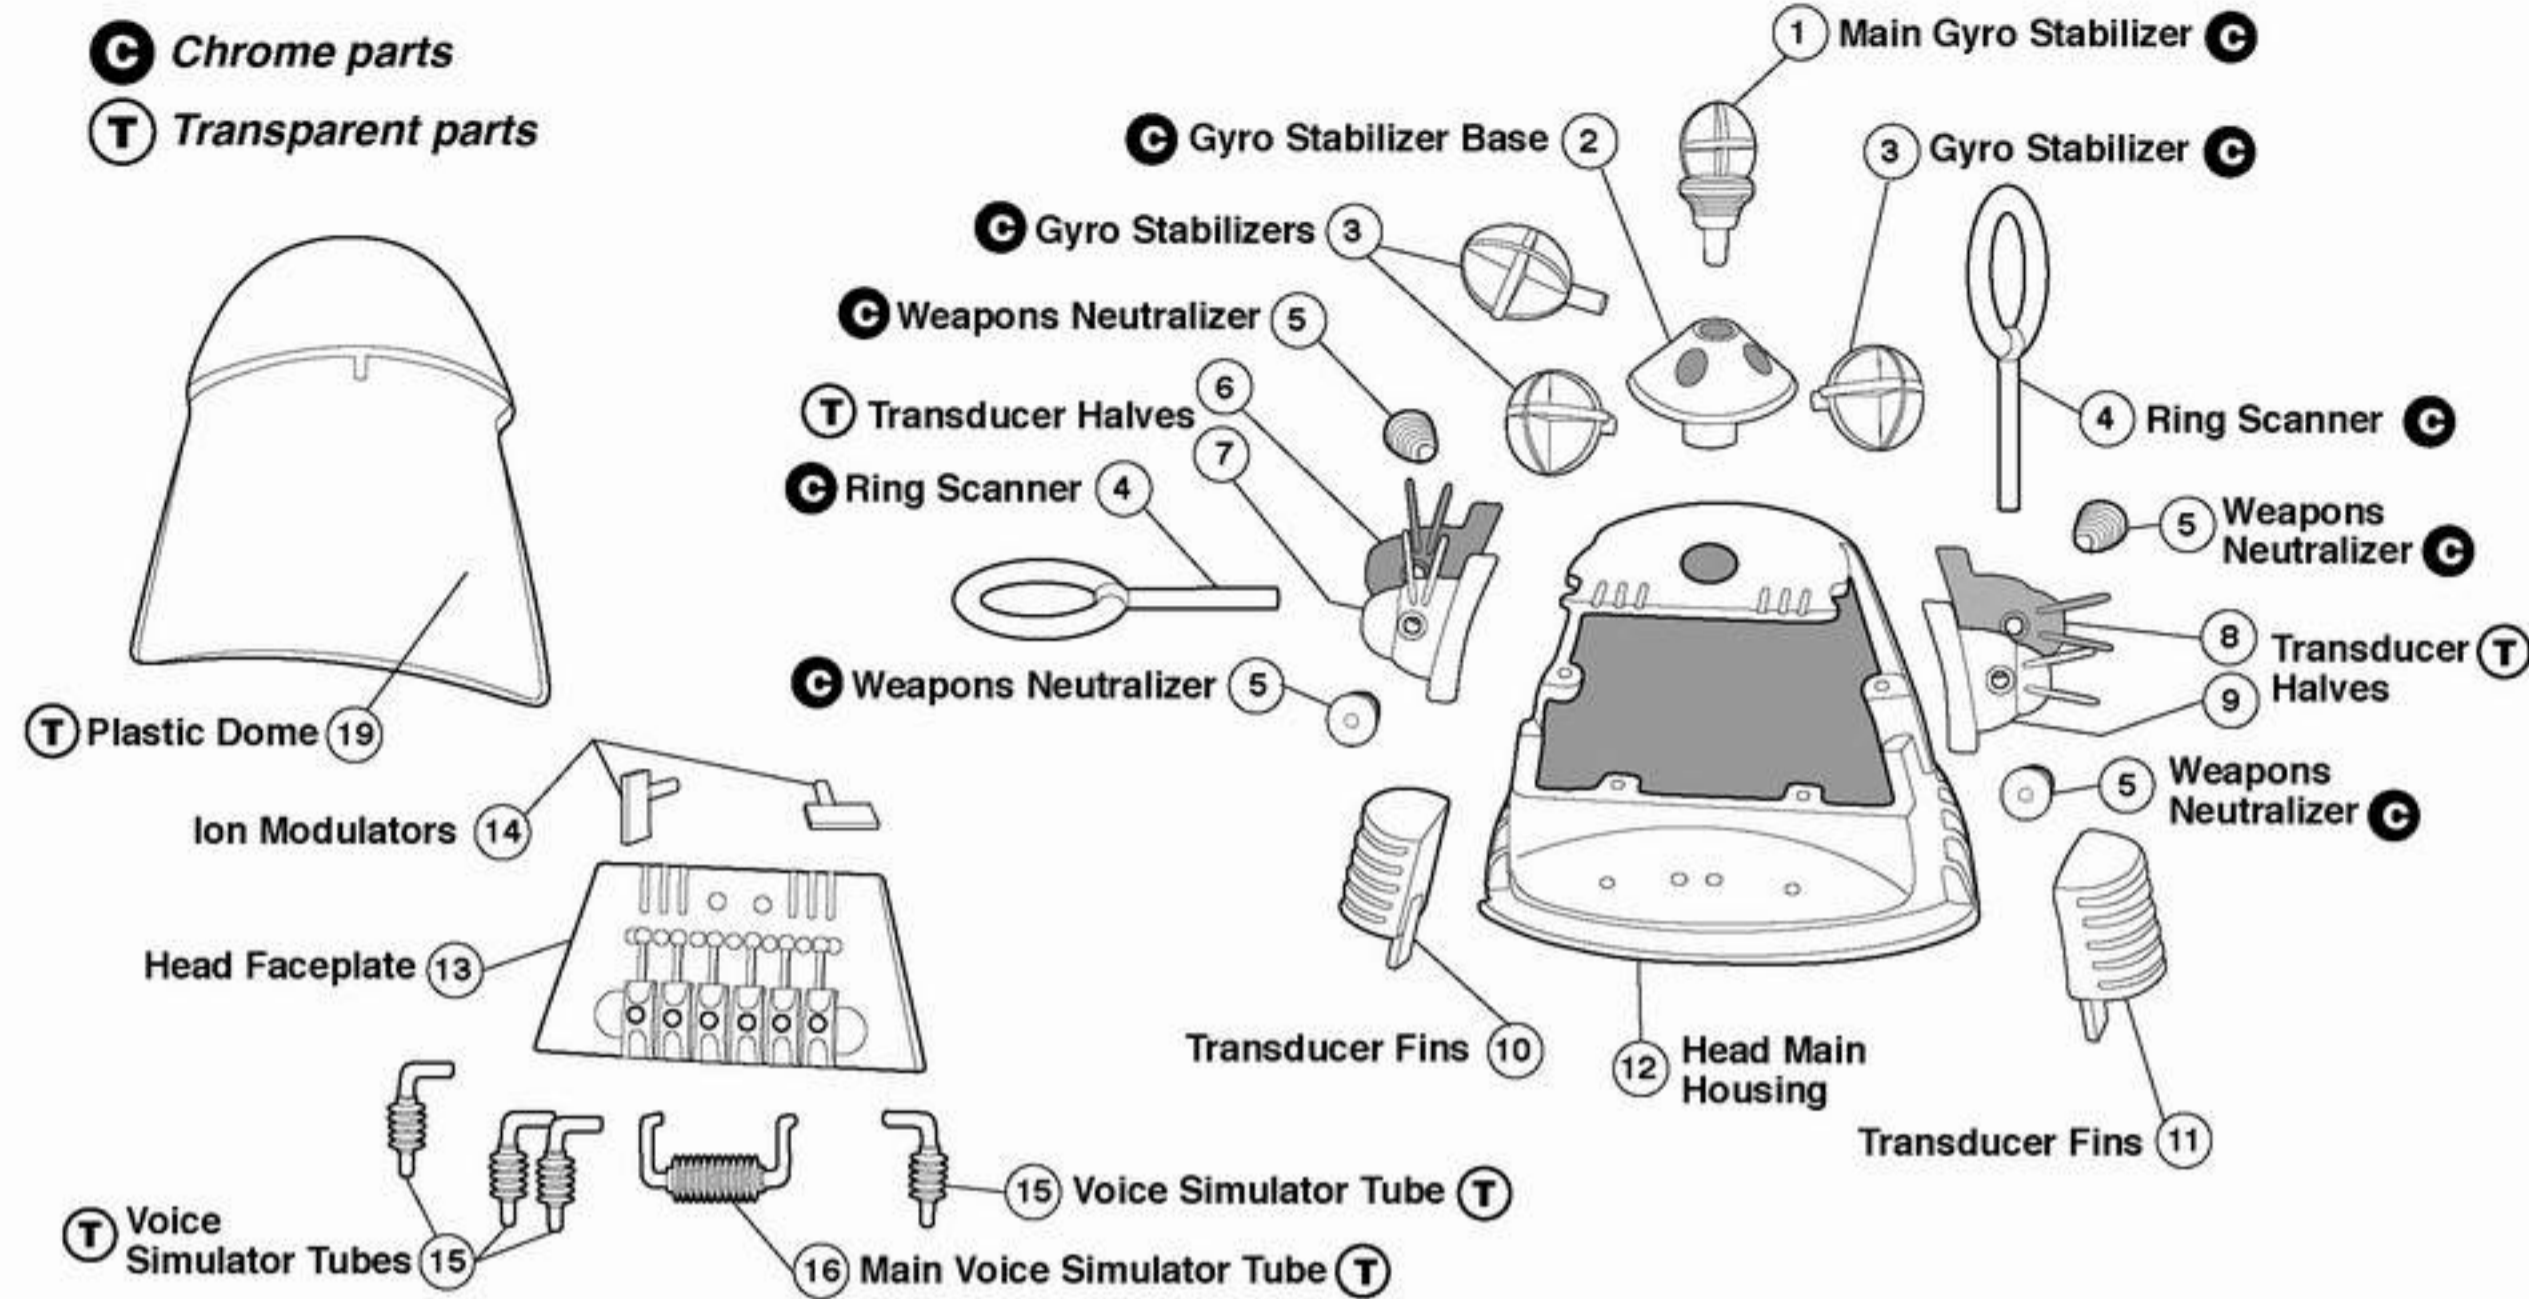

## 2 ASSEMBLE ROBBY'S ARMS

Cement **right arm halves (#24)** and **(#25)** together. Cement the **right hand thumb (#26)** to the **right hand fingers (#27)** and cement into position at the wrist. Cement **left arm halves (#28)** and **(#29)** together. Cement the **left hand thumb (#30)** to the **left hand fingers (#31)** and cement into position at the wrist.

If you wish to use the optional claw hands, cement together the **right optional claw halves (#20)** and **(#21)**, and the **left optional claw halves (#22)** and **(#23)**. Substitute these assemblies for the hands and assemble the arms. Set completed arms aside to dry.

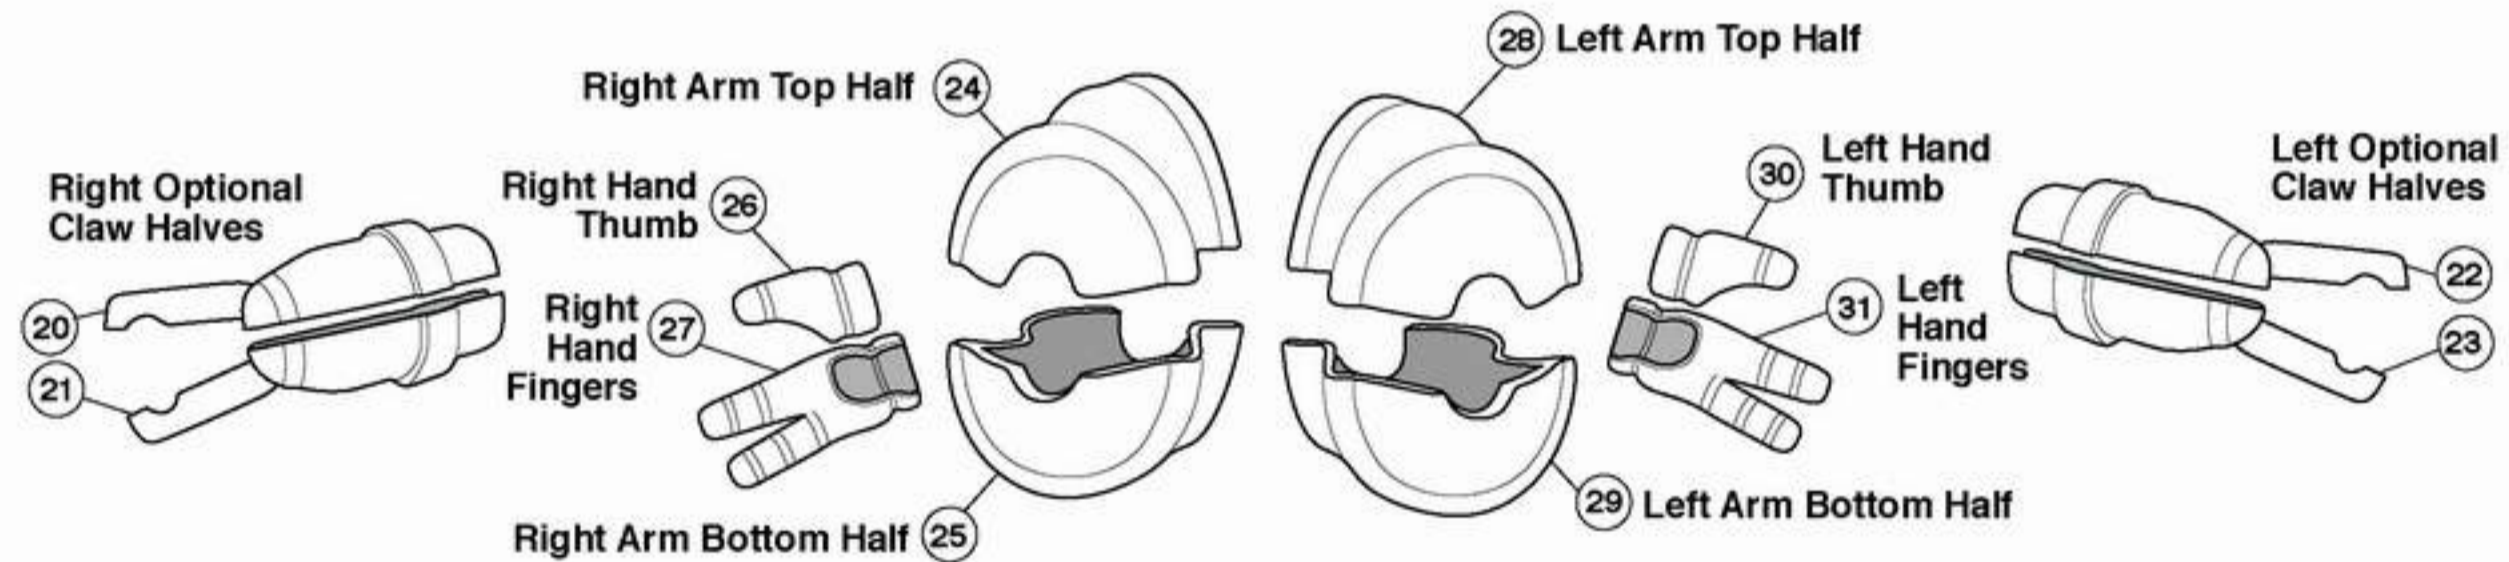


## 3 ASSEMBLE ROBBY'S BODY

Cement together the **body top half (#32)** to the **body bottom half (#33)**. Cement the assembled arms into position on the body.

Cement the assembled head into position on the body, then cement the **voice tube panel (#17)** onto **voice tubes support panel (#18)**, and glue this assembly into position in front of the head assembly.

Now cement **analyzer disc alpha (#34)** and **analyzer disc beta (#35)** into place on **Robby chest plate (#36)**. Cement this assembly into place on front of the assembled body.

As an alternative, if the claw hands are used: cement **optional Robotoid chest plate (#37)** into place. Set completed assembly aside to dry.

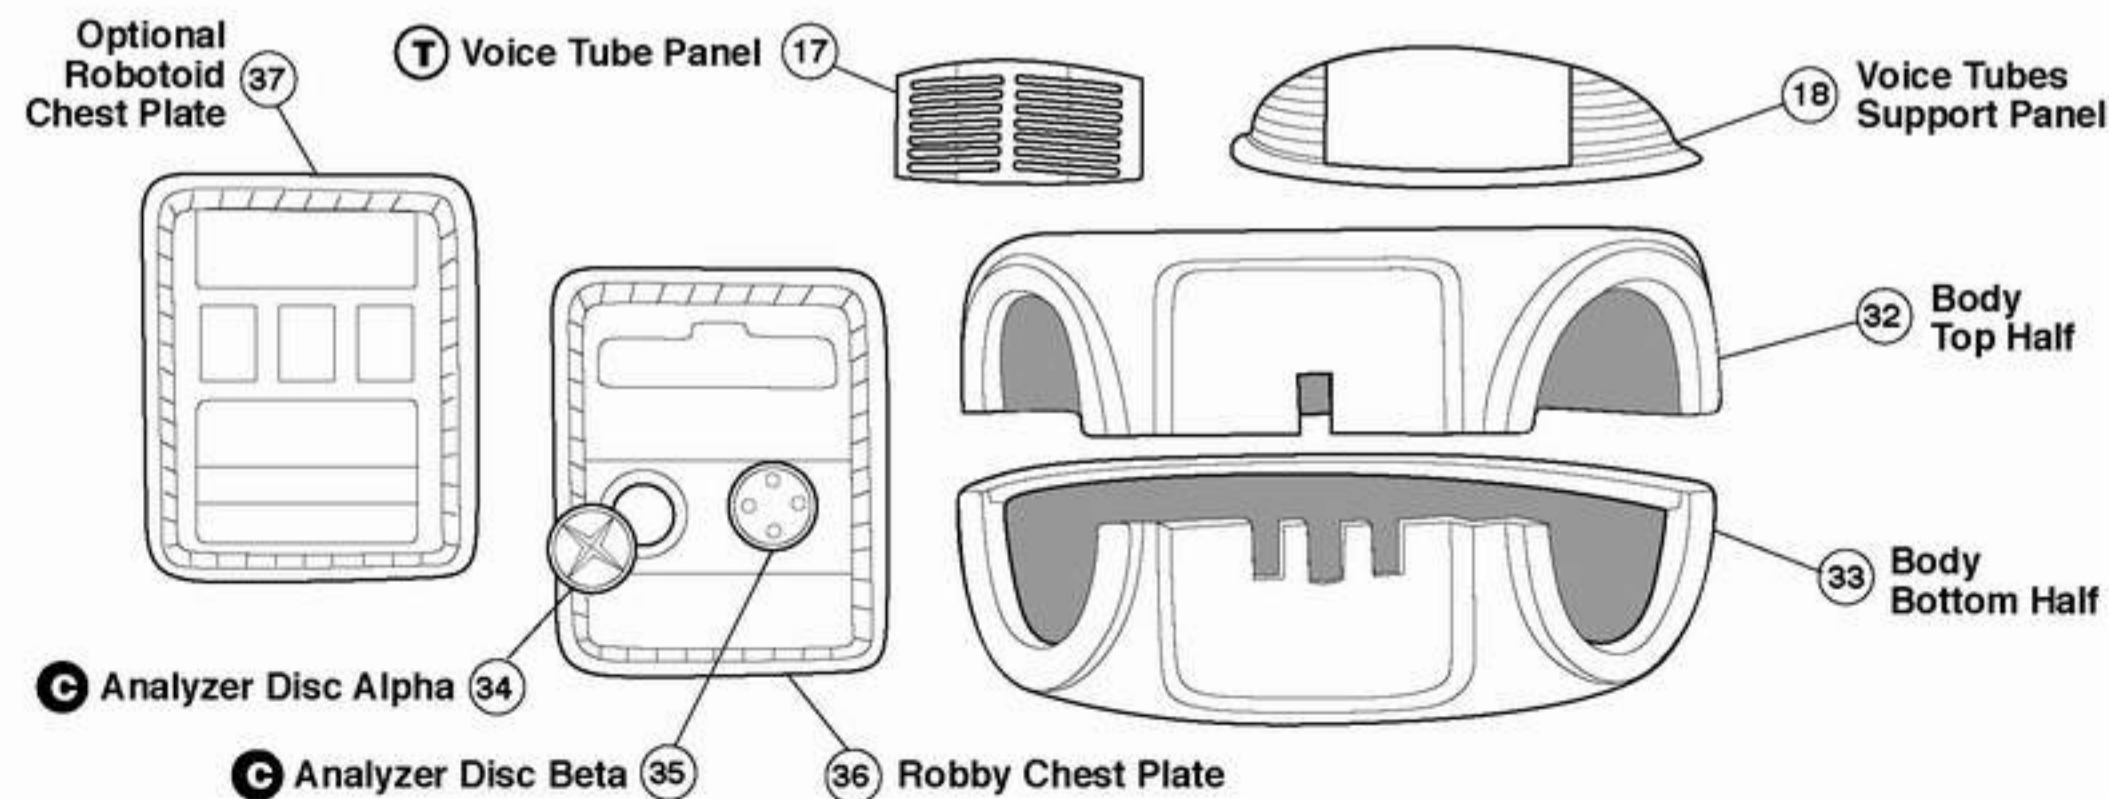

## 4 ASSEMBLE ROBBY'S LEGS - FINISH

Cement the **right foot halves (#40)** and **(#41)** together, and the **left foot halves (#42)** and **(#43)** together. Trapping these assemblies inside, cement together the **legs front half (#39)** and **legs back half (#38)**.

After allowing time for cement to set-up, cement the legs assembly to the assembled main body. Cement the completed Robby figure to **base (#44)**. Enjoy your stay on Altair-IV.

